



Create Your Own Custom Graphics!

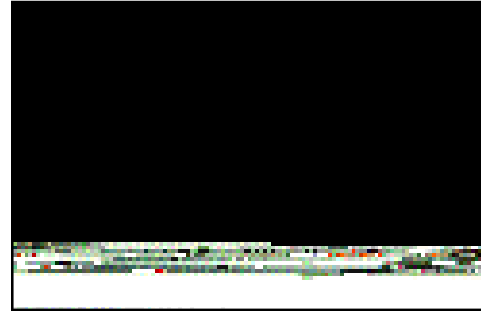

TIPS AND TRICKS:


- Use a knife with a stainless steel blade.
- Change blade tips often during application.
- Hold blade at a 45° angle while cutting.
- Colors can be layered to create new colors: red + yellow = orange; blue + red = purple
- If layering colors, put first color down completely before applying second color.
- Using a layer of silver film (GILA Mirror Silver # RTV246) behind the design enhances the visibility of the colors.
- Apply each color in the design independently of the other colors.
- Start with the largest area of color first.
- Designs should be applied to the inside of the window facing outwards. It will appear backwards as you apply and cut it.



CAUTION: Do not place design in an area where it will interfere with visibility.

I. PREPARATION

1. Prepare Application solution: Mix 1 tsp. Film Aid to one quart of water, or add 3 drops of baby shampoo to one quart of water. The adhesive on Xtreme Colors does not require a very soapy solution.



2. Clean the Window. Using the soapy solution, clean both the inside and outside of the window thoroughly, using a razor blade or scrubbing pad to remove any dirt which might be stuck to the glass.



3. Choose Design. Design should be printed on unlined paper, at full size, preferably outlined in black marker for visibility. The design should be backwards from the way you want it to appear on the glass.




4. Place Design: Tape the design in place on the opposite side of the window (the outside). The design should face inward.



5. Prepare Film: Choose the order of the colors to be laid down, then cut a piece of each color slightly larger than the area of the design.

II. APPLICATION




1. Apply the Film: Spray the window lightly with the soapy solution to cover the area of the first color to be used. Use two pieces of transparent tape to remove the liner from the film (refer to the instructions inside the film for more detail). Spray the adhesive and apply the wet film to the wet glass. Spray the outside of the film lightly and squeegee it into place. Remove all water and/or air bubbles from under the film. The film should cover the area of the design to be cut.



2. Cut the Design: Looking through the film to the design, use the utility knife to carve away the outermost borders of the design. Peel excess film from glass. There should be no adhesive left behind, but if there is, use a damp, soft cloth to remove by rubbing gently with fingertips.




Move to the inside of the design and carve away the detail, peeling excess film away as you work.




3. Add Other Colors: If your design contains additional colors, place the second color down next. The film may overlap the already trimmed first layer. Trim overlapped material first and remove excess film carefully and immediately so it will not begin to bond to the first layer. Continue to carve the remainder of the design area and remove excess film as you did in Step 2. Continue the process with any additional colors you may need.

CREATING DETAIL LINES: Remove design template from outer glass surface. Begin carving 1/16" parallel line next to each existing interior design line that has been cut in a previous step. Carefully remove each film sliver representing desired line detail as it is cut. Continue this process until all desired detail lines are obtained. Upon completion of this step, detail lines should appear as fine slivers of glass showing through the (colored) film design. The carving of detail lines should be performed before any enhancing (silver or black) film layer is applied.

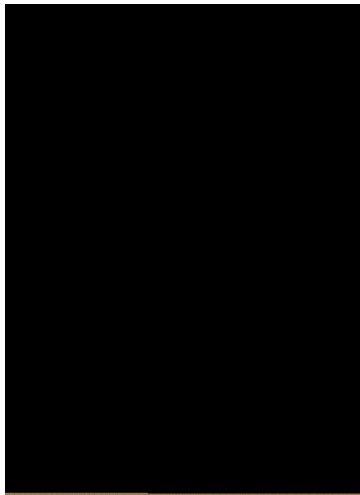

Unicorn created with Xtreme Limo Black and Mirror Gold.



Bunny created with Xtreme Limo Black and Mirror Silver.